


Installation Instructions

SPR-CB Series

All Silicon Bi-directional

Transient Voltage Suppressor

Outline Dimensions:

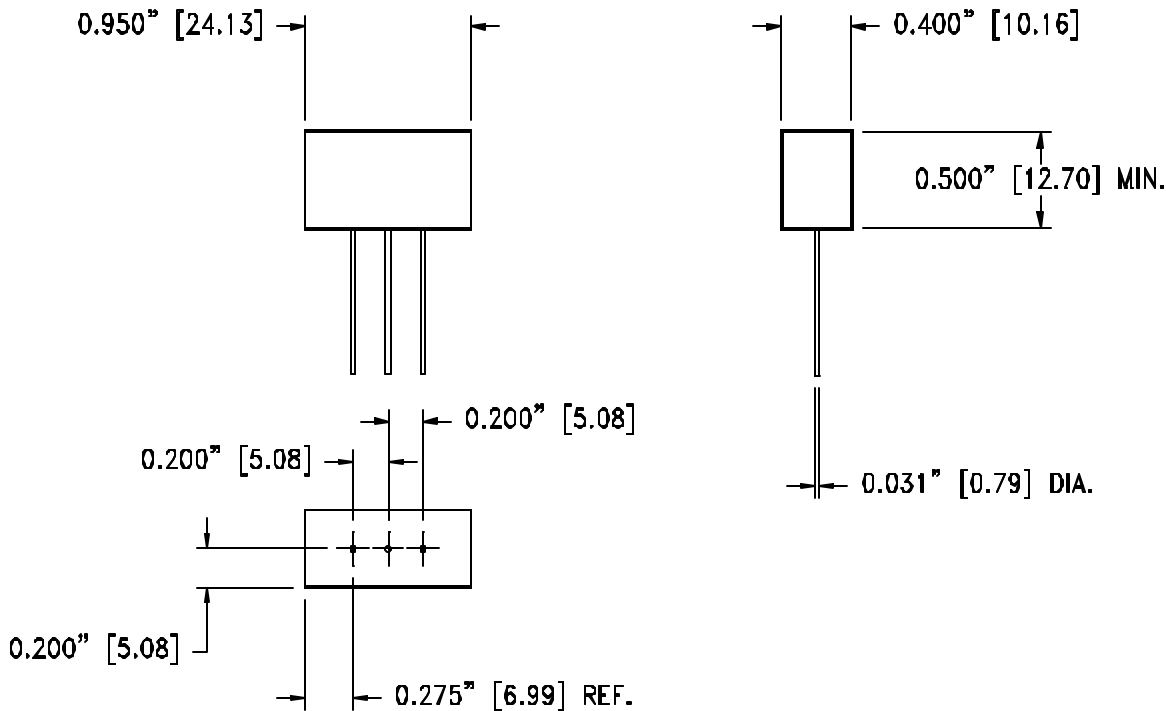

Wiring Instructions:

CAUTION: Make sure equipment power is OFF before installing suppressor.

- (A) Confirm correct operating voltage to ensure correct suppressor use.
- (B) Observe normal care relative to solid state components in soldering the SPR-CB to PCB.
- (C) Solder center terminal to ground on PCB.
- (D) Solder either data terminal to any data/signal line on PCB.
- (E) Restore Power to **ON**.

Note: For long duration transients, a large PCB land surface should be provided to remove heat via the device leads.