Installation Instructions

PIPT-120 Series

EMI/RFI Filter Electronic Surge Suppressor

Typical Installation:

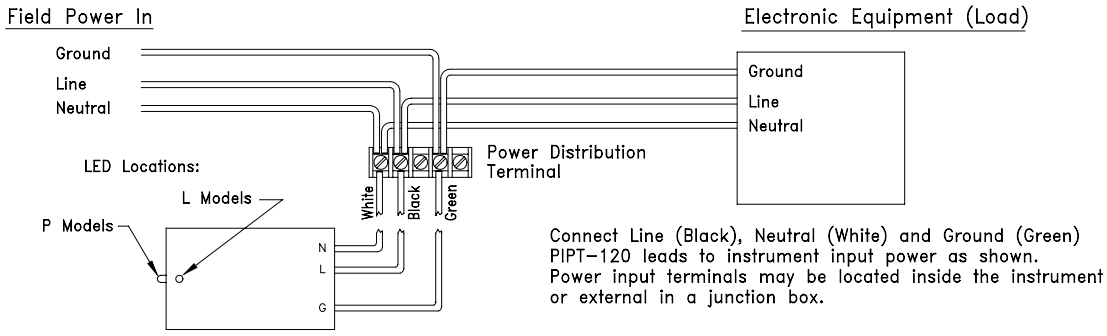

Outline Dimensions: (PIPT-120P1 shown)

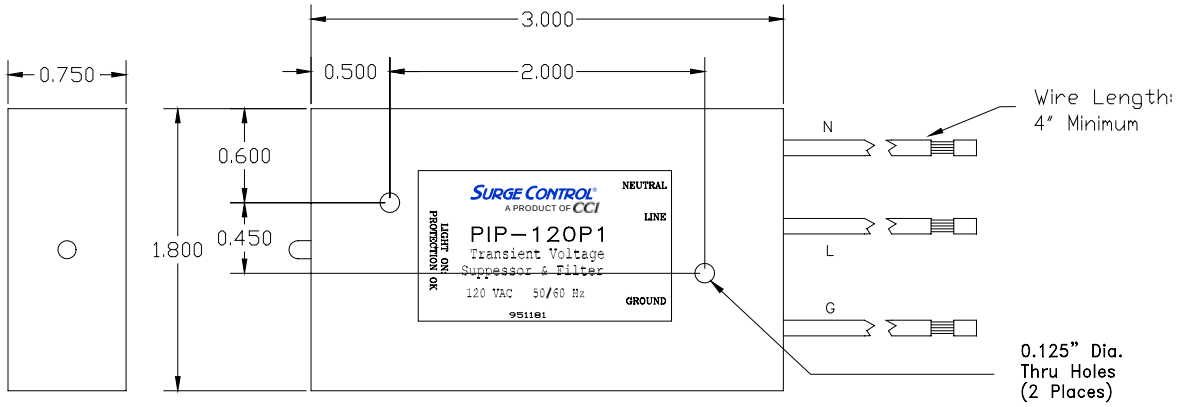

Wiring Instructions:

CAUTION: Make sure equipment power is OFF before installing suppressor.

External properly sized fuse is recommended for over current protection

(A) Mount PIPT-120 Series to a convienent surface using screws through holes in suppressor, or with mounting tape. The PIPT-120 Series is usually mounted inside the equipment it is to protect or may also be mounted inside a terminal junction box.
(B) Connect White lead to Neutral input terminal on instrument power terminals.
(**C**) Connect Black lead to Line input terminal on instrument power terminals.
(**D**) Connect Green lead to Ground input terminal on instrument power terminals.
(**E**) Restore power

Surge Control™ is a trademark of Circuit Components, Inc..

050301 Rev A

Circuit Components, Inc. All rights reserved.

For Technical Assistance Contact Us At:
Circuit Components, Inc. • 2400 S. Roosevelt Street Tempe, AZ • 85282
Tel: (480) 967-0624 • Fax: (480) 967-9385 • Email: info@surgecontrol.com
Website: www.surgecontrol.com

SURGE CONTROL™
A PRODUCT OF CCI